



SKELETON QD NAR MOUNT


OPERATOR MANUAL



B&T AG
3608 Thun • Switzerland
Tel +41 33 334 67 00
info@bt-ag.ch
www.bt-ag.ch

Advice	
	This operator manual only explains the use of the B&T Aimpoint® assembly. The operation of the Aimpoint® is explained in the Aimpoint® user manual.

EYE PROTECTION MUST BE WORN!	
	SAFETY GOGGLES MUST BE WORN WHEN DISASSEMBLING AND REASSEMBLING THE GUN. PARTS CAN GET INTO THE EYES IF HANDLED INCORRECTLY.

EAR PROTECTION MUST BE WORN!	
	SUITABLE HEARING PROTECTION MUST ALWAYS BE WORN WHEN SHOOTING WITH A FIREARM.

Definition

Left / right side: Defined looking in firing direction.


Table of Contents:


- 1. Installing the Aimpoint® on the mount4
- 2. Installing the mount on the weapon5
 - 2.1 Adjust QD system6
- 3. Warranty statement7

Related documents:

- Technical manual TM-B&T_QD_System-EN

1. Installing the Aimpoint® on the mount

Advice	
	In order to fix the Aimpoint® on the mount, four screws are needed.

Advice	
	Loctite® 243 is used for screw locking.



- Degrease the screws and threads of the Aimpoint®.
- Place the Aimpoint® on the mount.
- Apply a small amount of Loctite® 243 to the threads of the four screws.
- Place the four screws in the mount.
- Tighten the screws crosswise until a slight resistance can be felt. Tighten the screws a further 1/4 turn to fully tighten them (1.35 Nm / 1.0 ft-lb).



2. Installing the mount on the weapon


- a. Release the lever by pushing the lock toward the end of the lever.



- b. Place the assembly on the accessory rail with the V-shaped recess.
» Mostly from the right in the direction of shooting.



- c. Close the lever to hold the assembly in place.

ATTENTION!	
	When the lever is at 45 degrees, resistance should be felt. If so, the assembly is set correctly. If not, it must be adjusted according to 2.1.




- d. The lock shall snap audibly in place.


- e. To release the assembly, slide the lock toward the end of the lever and release the lever. The assembly can now be removed.




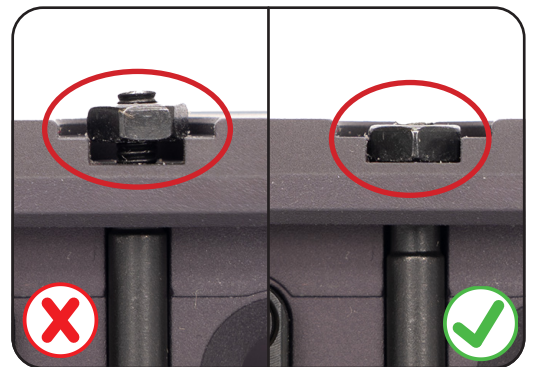
2.1 Adjust QD system

- Open the lever.
- Push the nut against the assembly.
- To loosen, turn the nut clockwise by hand. Turn counter-clockwise to tighten.

Advice	
	A maximum of 60° (one area of the hex nut) should be adjusted per pass.

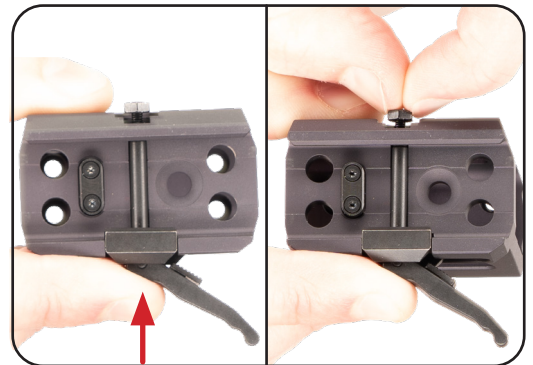

ATTENTION!	
	The nut must be positioned after rotation so that it fits into the recess and does not protrude.



3. Warranty statement

Warranty claims on behalf of the Client are to be explicitly declared as such. During the legal warranty period, B&T provides warranty cover solely for defects that arise as a result of faulty materials, construction errors or poor workmanship. If a warranty claim is justified, B&T will, at its own discretion, either repair or replace the defective good. Costs incurred in transporting the defective good to B&T are borne by the Client. Spare parts fitted and replaced become the property of B&T.

Inasmuch as is legally permitted, any other liability of B&T is excluded, in particular liability for damages arising either directly or indirectly from the delivered good itself, from its use or from its defects.

Merchandise is covered by the warranty provisions of the manufacturer. Parts that are naturally subject to wear and tear, damage arising from insufficient maintenance work, noncompliance with operating regulations and cases of force majeure are all excluded from warranty cover. Warranty claims lapse if the Client itself or third parties alter or repair the delivered good without the prior written consent of B&T. All product specifications are subject to change without prior notice. Published data are mean values and therefore not suitable acceptance criteria.

The manufacturer:

B&T AG - 3608 Thun - Switzerland

Phone +41 33 334 67 00

e-mail: info@bt-ag.com

Notes:

This image shows a full page of blank graph paper. The grid consists of small, uniform squares formed by thin, light gray lines. The paper is otherwise completely empty, with no margins, text, or other markings.